

序号	版本	变更标记	变更描述	变更者	审核	日期
1						
2						
3						

公差等级	线性尺寸极限偏差数值					倒圆角半径与倒圆角高度尺寸极限偏差数值		
	>0.5~3	>3~6	>6~30	>30~120	>120~400	0.5-3	>3~6	>6~30
f	±0.05	±0.05	±0.1	±0.15	±0.2	±0.2	±0.5	±1
m	±0.2	±0.1	±0.2	±0.3	±0.5			
c	±0.1	±0.3	±0.5	±0.8	±1.2	±0.4	±1	±2
v	-	±0.5	±1	±1.5	±2.5			

USER MANUAL

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

SPECIFICATIONS

165mm 7000cd 1m IPX5

(L)33.50 x (W)1.65 x (H)1.54in
(L)1.31 x (W)0.06 x (H)0.06in

6.47oz
183g

Note: The maximum output brightness will decrease as the battery voltage decreases.

HOW TO INSTALL

HOW TO RECHARGE

Micro USB

Standard charging time
Approx.5hrs (5V 2A)

OLED SCREEN

• LOGO • Charging • Remaining battery

• Remaining • Data failure • Charging status

• DRL • Mainlight L
• DRL • Mainlight R
• All 3 lights on
• DRL on • Mainlights flash

HOW TO EXCHANGE BATTERY MODULE

MODE	BRIGHTNESS	10%	25%	50%	100%
LOGO	100	250	500	1000	14:30
FLASH	10:00	05:30	03:30	02:00	
FLASH	100	250	500	1000	
FLASH	10:00	05:30	03:30	02:00	
FLASH	200	500	1000	2000	
FLASH	08:30	03:30	02:00	01:00	
FLASH	200	500	1000	1000	
FLASH	10:50	05:30	03:30	01:50	

DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the light head when the bicycle light is on, or place the bicycle light head on the ground. The radiation energy of the bicycle light may cause damage to the bicycle light itself, or even result in burning to flammable objects.

WARNING

- Keep out of reach of children.
- The light contains a lithium-ion battery. Certain restrictions may apply to this product when traveling, especially when traveling by air. Always check with your carrier for specific restrictions prior to traveling with this product.

NOTICE

Store the light at room temperature in a dry place. Avoid moisture, or extreme hot or cold.

Store the light in the charged condition. Avoid "deep discharge." Battery life will decrease if the light is stored in a fully discharged condition.

Over time, the run time of the battery will diminish. Expect about 500 full charges, depending on use. After a full life, the battery will continue to charge but with a lower run time.

When the run time is unsatisfactory, please recycle. Do not open the case of the light or incinerate.

CONTENTS

(EN) English 01

(CHS) 简体中文 01

(NED) Nederland 01

(DE) Deutsch 01

(JP) 日本語 01

(FR) Français 02

(IT) Italia 02

(EN) English

HOW TO OPERATE

Long press to turn on/off the light, click to change the brightness level and flash modes, and double click to switch modes. Mode memory function will save the last selected mode and brightness.

(CHS) 简体中文

如何操作

长按开机/关机, 单击切换不同亮度或闪烁方式, 双击切换不同模式, 再次单击进入上次关机时的模式及亮度。

(NED) Nederland

HOE TE BEDIENEN

Druk lang om het licht aan/uit te zetten, klik om het helderheidsniveau en de flits modi te veranderen en dubbelklik om tussen de modi te schakelen. De modus geheugenfunctie zal de laatste geselecteerde modus en helderheid opslaan.

(DE) Deutsch

BEDIENUNG

Gedrückt halten, um das Licht ein-/auszuschalten. Kurz Anklicken zum Umschalten der Helligkeitsstufe und Blitzmodi und Doppelklick zum Umschalten der Modi. Die Modus-Speicherfunktion wird den zuletzt ausgewählten Modus und die Helligkeitsstufe speichern.

(JP) 日本語

使用方法

ON/OFFランプを長く押して、クリックして輝度のレベルとフラッシュモジュールを変更し、ダブルクリックしてSWITCHモデルに切り替えます。モデルメモリ機能が最後のモデルと輝度の記録を残ります。

(FR) Français

COMMENT L'UTILISER

Appuyez longuement pour allumer/éteindre la lumière, cliquez pour changer le niveau de luminosité et les modes de flash, et double-cliquez pour basculer d'un mode à l'autre. La fonction de mémoire de mode enregistre le dernier mode et la dernière luminosité sélectionnés.

(IT) Italia

FUNZIONAMENTO

Premere a lungo per accendere / spegnere la luce, cliccare per modificare il livello di luminosità e le modalità flash e fare doppio clic per cambiare modalità. La funzione di memorizzazione della modalità salverà l'ultima modalità e luminosità selezionate.

WARRANTY

Within 30 days of purchase: Return to the original seller for repair or replacement.

Within 2 years of purchase: Return to Olight for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Olight itself.

USA Customer Support
cs@olightstore.com

Global Customer Support
customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.

OLIGHT
Dongguan Olight E-Commerce Technology Co., Ltd
4th Floor, Building 4, Kage Industrial Park, No. 6 Zhongnan Road, Chang'an Town, Dongguan City, Guangdong, China.
Made in China

THANK YOU!

技术要求：

- 1、未注公差等级按GB/T1804-m
- 2、成品尺寸：62x152mm
纸张：100克哑粉纸，单色双面印刷
- 3、装订工艺：风琴折
- 4、公差尺寸：±1mm。
- 5、成品效果如左图所示。
- 6、注意文件中标题的方框在传输或者格式转换
- 7、时容易丢失，请检查。
- 8、成品无页面顺序错乱，无文字不清晰，无缺少文字或图案。
- 9、因为格式和版本转换问题，会出现文件中部分内容丢失、损坏或者不显示，所以本文件会同时匹配 Ai 和PDF两种格式，PDF格式以作对照使用，如出现问题请及时与我司人员联系确认。
- 10、此文件格式为Illustrator CS6格式

				数量	设计	郑集提	
				页数	制图		
图名	ALLTY 2000 (双LOGO) 说明书(C0605)	材料	100克哑粉纸	版本	A0	审阅	何志忠
产品名	ALLTY 2000	比例	1:1	零件编码	22-		
日期	2020.07.15	单位	mm 公制				