 




OOLIGHT USER MANUAL

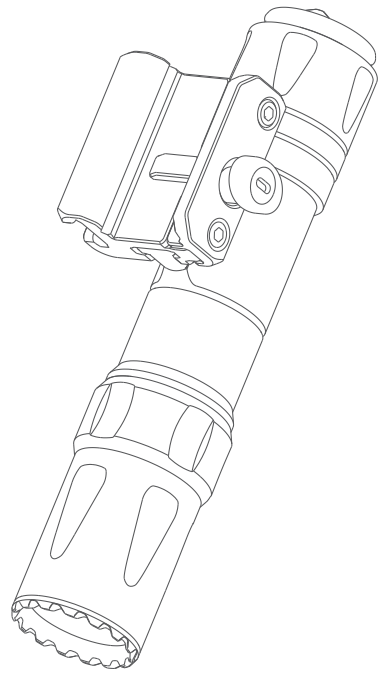

Odin

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

  IN THE BOX

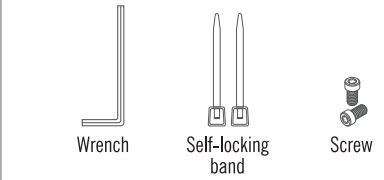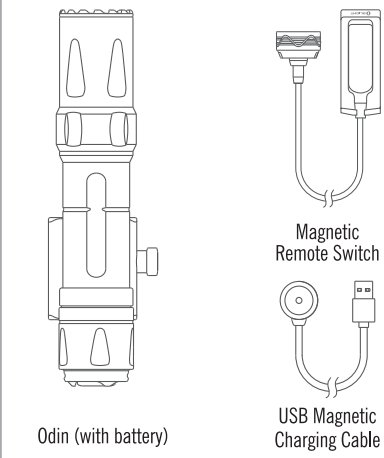

SPECIFICATIONS


Table with flashlight specifications: HIGH 2000 lumens, LOW 300 lumens, beam distance 300m, brightness 22,500cd, throw 1.5m, protection IPX8, dimensions (L)5.37*(D)1.14in, weight 7.62oz/216g.

All above specifications are test results based on ANSI/NEMA FL1-2009 Standard. The tests are performed using the battery included in the light. Note: The light output brightness will decrease as the battery voltage decreases.

USB MAGNETIC CHARGING CABLE -- MCC3


Table with charging cable specifications: Charge cable, Input, Charging pattern, Maximum charging current, Full-charged voltage, Charge indication, Full-charged time.

 PRODUCT OVERVIEW

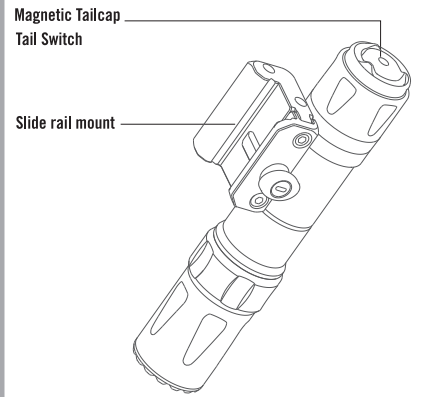

BATTERY INSTALLATION

 Before first use, unscrew the tailcap and remove the insulating film within the battery compartment before screwing the tailcap back on tightly.

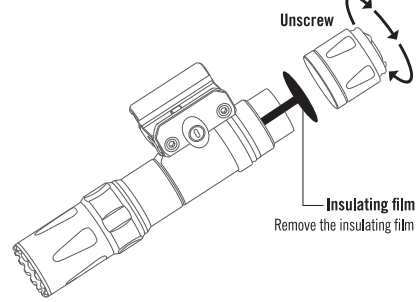

AVAILABLE BATTERIES

- 1 x customized 5000mAh 21700 rechargeable lithium battery

 
CHARGING

VIBRATING POWER INDICATOR

It helps to alert if the battery is low (power < 20% vibrate once every 5 minutes; power < 10% vibrate once per minute; power < 5% vibrate once every 10 seconds).

GREEN Charging Completed


RED Charging

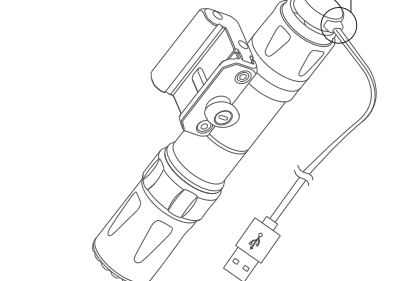


* Before first use please fully charge the product. * Connect the magnetic USB end of the charging cable (MCC3) to an external USB power source, then attach the other end of the magnetic charging cable to the charging port.

PRODUCT INSTALLATION

 
a. Rotate the button 90 degrees counterclockwise to unlock the product as the mark shows.

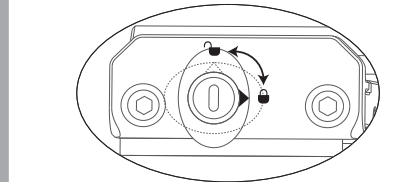

 
b. Press the button and remove the product.

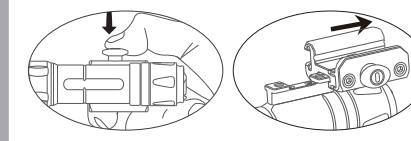

 c. Loosen the screws and install the rail mount in its desired position, then tighten the screws.

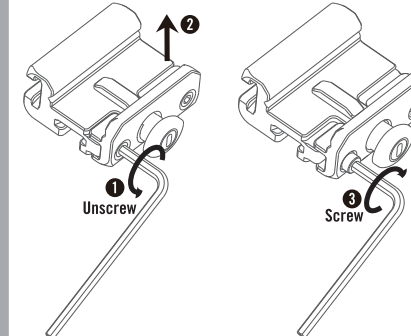


 d. Slide the product into the rail mount until you hear a click, then turn the button 90 degrees clockwise as the mark shows to fix the product.

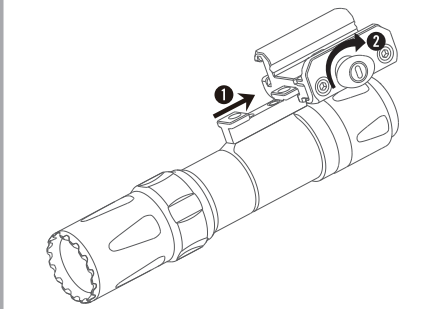


REMOTE SWITCH INSTALLATION

 a. Attach the magnetic remote switch to the tail of the product (make sure the detent ring of the remote switch is unlocked).

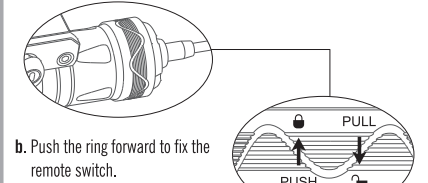

 b. Push the ring forward to fix the remote switch.



DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes. DO NOT cover the light head when the flashlight is on, or place the light head on the ground.

WARNING

- Keep out of reach of children. DO NOT activate high mode repeatedly under high temperature to prevent the light body from overheating and hurting the user's hand.

NOTICE

- DO NOT short circuit the switch cap with the ring outside it for a prolonged period. The short circuit in this case will result in a loss of current below 3mA, and may lead to a complete battery drain if it is in this state for too long.

CONTENTS

Table listing contents by language: (EN) English, (CHS) 简体中文, (FI) Finnish, (NO) Norwegian, (SV) Swedish, (NED) Nederland, (PL) Polska, (DE) Deutsch, (HU) Magyarorszag, (RU) Русский, (ES) Español, (RO) Romanesc, (UA) Ukrainian, (JP) 日本語, (TH) ไทย, (FR) Français, (BG) Български, (IT) Italia, (SK) Slovenskýjazyk.

(EN) English

HOW TO OPERATE

Click the tail switch lightly to produce a low light output or press the tail switch hard to produce a high light output. Single click (click and release quickly) the tail switch to turn the flashlight on or off.

(CHS) 简体中文

如何操作手电

轻按输出低亮档，重按输出高亮档；单按（按下并快速释放）开启或关闭手电；长按并保持，手电开启，按键释放时手电同步关闭。

(FI) Finnish

VALAISIMEN KÄYTTÖ

Käytä alhaista valotehoa painamalla kytkintä kevyesti ja korkeaa valotehoa painamalla kytkintä kovaa. Kytke valaisin päälle ja pois päältä painamalla kytkintä kerran lyhyesti.

(NO) Norwegian

HVORDAN BRUKE

Klikk lett på bryteren for å produsere et svakt lys, eller trykk hardt på bryteren for høy lyseffekt. Enkelt klikk (klikk og slipp raskt) på bryteren for å slå lommelykten av eller på.

(SV) Swedish

BYTA EFFEKTLÄGE

Klicka på knappen lätt och lampan kommer lysa med svag styrka eller klicka på knappen hårt för att lampan ska lysa med hög ljusstyrka. Klicka en gång (tryck släpp snabbt) på knappen för att tända/släcka lampan.

(NED) Nederland

HOE TE BEDIENEN

Klik zachtjes op de staartschakelaar om een laag lichtrendement te produceren of druk hard op de staartschakelaar om een hoog lichtrendement te produceren. Eén keer klikken (snel klikken en loslaten) op de staartschakelaar om de zaklamp in of uit te schakelen.

(PL) Polska

INSTRUKCJA UŻYTKOWANIA:

Lekkie wcisnięcie tylnego przycisku spowoduje uruchomienie latarki w trybie najniższym. Mocne wcisnięcie tylnego przycisku spowoduje włączenie trybu najwyższego. Pojedyncze wcisnięcie tylnego przycisku spowoduje włączenie lub wyłączenie latarki.

(DE) Deutsch

BEDIENUNG

Durch leichtes Drücken des Endkappenschalters erhält man eine niedrige Lichtleistung, durch festeres Drücken des Endkappenschalters erhält man eine hohe Lichtleistung. Durch einmaliges Drücken des Endkappenschalters (schnelles Klicken und Loslassen) wird die Taschenlampe an- oder ausgeschaltet.

(HU) Magyarorszag

A HASZNÁLAT MÓDJA

Nyomja meg finoman a hátsó zárókupakon lévő kapcsolót az alacsony fényerőfokozat üzemmód kapcsolásához. A lámpa erős fényerőfokozatra kapcsolásához nyomja be teljesen a hátsó zárókupakon lévő kapcsolót.

A kapcsoló benyomásának és nyomva tartásának idejére a lámpa bekapcsol, majd a kapcsoló felengedésekor kikapcsol.

(RU) Русский

Инструкция

Легкое нажатие активирует режим 300 люмен, полное нажатие активирует режим 2000 люмен. Для включения фонаря необходимо быстро нажать и отпустить торцевую кнопку. Если нажать и удерживать кнопку, фонарь будет гореть до тех пор, пока Вы ее не отпустите.

(ES) Español

CÓMO OPERAR

Pulse suavemente el interruptor remoto para producir poca luz de salida o pulse fuerte el interruptor remoto para producir mucha luz de salida. Un Sóló Clic (pulse brevemente) el interruptor remoto para encender o apagar la linterna.

(RO) Romanesc

MOD DE OPERARE:

Apasati butonul usor pentru a porni in modul mic sau apasati butonul ferm (tare) pentru a porni modul maxim. Apasare normala (apasati scurt apoi eliberati) pentru a porni sau opri lanterna.

(UA) Ukrainian

Як працює:

Легке натискання на торцеву кнопку вмикає економічний режим яскравості; сильніше натискання переводить ліхтарик у стандартний режим світіння. Одне швидке натискання кнопки (натисніть і одразу відпустіть) вмикає і вмиккає ліхтарик.

(JP) 日本語

使用方法

テールスイッチを軽く押すとLowモードで常時点灯。強く押すとHighモードで点灯します。テールスイッチをシングルクリック（クリックして素早く離す）するとライトが点灯・消灯します。

(TH) ไทย

ไฟฉาย Odin มีโหมดต่าง ๆ อยู่หลายโหมดซึ่งสามารถกำหนดได้โดยการกดสวิทช์ท้ายบนก้อยหรือเบา สำหรับเปิดไฟฉาย ทำได้โดยการกดสวิทช์ท้ายแล้วปล่อย ไฟฉายจะเปิด หรือกดครั้งหนึ่งเปิดไฟฉาย ส่วนการเปิดหรือปิดชั่วคราว ได้โดยการกดสวิทช์ท้ายครึ่งหนึ่งค้างไว้ ไฟฉายจะติด และไฟฉายจะดับเมื่อปล่อยสวิทช์ท้าย

(FR) Français

COMMENT L'UTILISER

Presser légèrement le bouton arrière pour activer le niveau de sortie faible ou presser plus fort pour activer le mode fort. Un simple clic (presser et relâcher rapidement) allume et éteint la lampe.

(BG) Български

Начин на работа

Леко задействане на бутона за слаб режим и пълно задействане за силен режим. Единичен бърз клик – включване/изключване. Задействане и задържане на бутона за моментно задействане. При отпускане на бутона фенера се изключва.

(IT) Italia

FUNZIONAMENTO

Premere leggermente l'interruttore posteriore per produrre un'emissione di luce bassa o premere con forza l'interruttore posteriore per produrre un'elevata emissione di luce.

Con un solo clic (fare clic e rilasciare rapidamente) l'interruttore posteriore per accendere o spegnere la torcia elettrica. Quando si tiene premuto l'interruttore, la torcia si trova in modalità momentanea; quando si rilascia l'interruttore, si spegne.

(SK) Slovenskýjazyk

AKO POUŽÍVAŤ

Ľahko stlačíte spínač koncovky, aby ste dosiahli slabý svetelný výkon, alebo stlačíte silnejšie koncový spínač, aby ste dosiahli vysoký svetelný výkon. Jedným kliknutím (rychlým kliknutím a uvoľnením) koncovým spínačom zapnete alebo vypnete svetidlo. Keď stlačíte a podržíte spínač, svetidlo bude vo chvíľkovom režime; pri uvoľnení koncového spínača sa vypne.

EU-DECLARATION OF CONFORMITY



EU-Declaration of Conformity can be found here CE: https://olightworld.com/ec-declaration

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement. Within 5 years of purchase: Contact Olight for repair or replacement.

Battery warranty: Olight offers a one year warranty for all rechargeable batteries. USB magnetic charging cable: One year. The other no warranty fragile or low-value fittings like lanyard and clip, you can contact post-sale in 30 days after purchase if it has quality drawback or damage under normal use condition.

USA Customer Support

cs@olightstore.com Global Customer Support customer-service@olightworld.com Visit www.olightworld.com to see our complete product line of portable illumination tools.

OOLIGHT

Dongguan Olight E-Commerce Technology Co., Ltd 4th Floor, Building 4, Kequ Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China. Made in China



3.0041.6010.9000

A. 05. 20. 2020