 
 


OOLIGHT USER MANUAL

 
 
 
 
 
 
 
 
 
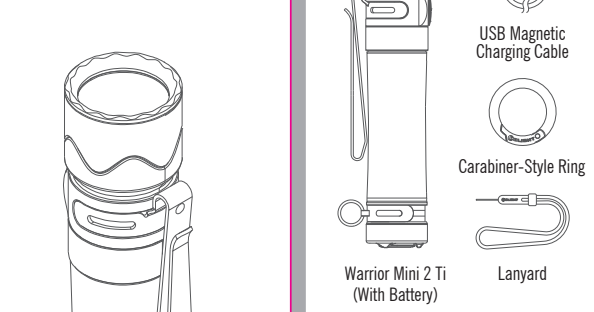 


Thank you for purchasing this Oolight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX



SPECIFICATIONS



NOTE:

If using moonlight mode, the battery indicator will only display when the battery level is below 5%.

US5 MAGNETIC CHARGING CABLE – M0C3

| Parameter | Specification |
|----------------|--|
| Charging cable | USB Type A - magnetic charging connector, length: 0.5m |
| Input | USA - Type II 5V 2A |

CHARGING

3.5 hours (For reference only. When the USB power source is insufficient, please try a 5A power source for faster charging.)

Red: charging
Green: full (low 95% or disconnected with flashlight)

AVAILABLE BATTERIES

1 x customized 3500mAh 18650 rechargeable lithium battery

>60% Green Indicator
<5% Indicator Blinks Red

BATTERY LEVEL INDICATOR

10-60% Orange Indicator
5-10% Red Indicator

* Before first use please fully charge the product.
* Connect the USB end of the magnetic charging cable to an external USB power source, then attach the other end of the cable to the charging port of the light. Best charging efficiency with a 5W (1A/5A) USB power source.

WARNING

DO NOT activate turbo mode repeatedly under high temperature. Present the flashlight body from overheating and hurting the user's hand.

The tail switch may not work immersed in sea water or other conductive media. Please try to keep it clean and dry.

DO NOT use Non-protected rechargeable batteries, or any other compromised state.

DO NOT take the battery out of the flashlight for charging.

Take good care of the battery. If the battery needs to be replaced, please keep the removed battery in a safe place. DO NOT mix it with the conductive media.

The product is left unused or carried and transported, please lock the battery to avoid accidentally activating the flashlight.

DANGER

DO NOT touch the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.

The max load of the Carabiner-Style Ring is 5kg, and please DO NOT use it for climbing.

PROXIMITY PROTECTION FUNCTION

When the front lens proximity sensor detects an object, it will automatically reduce the brightness. While in this state, the side switch can only turn the light off. The light will turn off directly if the blockage continues for more than 60 seconds.

ATTENTION

Please keep the surface of the lens clean. Scratches will affect the performance of the built-in sensor located in the black area, resulting in the failure of high and above modes, please take it into account.

Try to avoid to protect the lens from scratches. Scratches on the surface of the lens will reduce the luminous flux. In severe cases, it will affect the built-in sensor performance, resulting in the failure of high and above modes.

CAUTION

DO NOT touch the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.

PERMANENT DAMAGE TO THE EYES

The max load of the Carabiner-Style Ring is 5kg, and please DO NOT use it for climbing.

PROXIMITY PROTECTION FUNCTION

When the front lens proximity sensor detects an object, it will automatically reduce the brightness. While in this state, the side switch can only turn the light off. The light will turn off directly if the blockage continues for more than 60 seconds.

ATTENTION

Please keep the surface of the lens clean. Scratches will affect the performance of the built-in sensor located in the black area, resulting in the failure of high and above modes, please take it into account.

Try to avoid to protect the lens from scratches. Scratches on the surface of the lens will reduce the luminous flux. In severe cases, it will affect the built-in sensor performance, resulting in the failure of high and above modes.

WARNING

DO NOT activate turbo mode repeatedly under high temperature. Present the flashlight body from overheating and hurting the user's hand.

The tail switch may not work immersed in sea water or other conductive media. Please try to keep it clean and dry.

DO NOT use Non-protected rechargeable batteries, or any other compromised state.

DO NOT take the battery out of the flashlight for charging.

Take good care of the battery. If the battery needs to be replaced, please keep the removed battery in a safe place. DO NOT mix it with the conductive media.

The product is left unused or carried and transported, please lock the battery to avoid accidentally activating the flashlight.

DANGER

DO NOT touch the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.

PERMANENT DAMAGE TO THE EYES

The max load of the Carabiner-Style Ring is 5kg, and please DO NOT use it for climbing.

PROXIMITY PROTECTION FUNCTION

When the front lens proximity sensor detects an object, it will automatically reduce the brightness. While in this state, the side switch can only turn the light off. The light will turn off directly if the blockage continues for more than 60 seconds.

ATTENTION

Please keep the surface of the lens clean. Scratches will affect the performance of the built-in sensor located in the black area, resulting in the failure of high and above modes, please take it into account.

Try to avoid to protect the lens from scratches. Scratches on the surface of the lens will reduce the luminous flux. In severe cases, it will affect the built-in sensor performance, resulting in the failure of high and above modes.

WARNING

DO NOT activate turbo mode repeatedly under high temperature. Present the flashlight body from overheating and hurting the user's hand.

The tail switch may not work immersed in sea water or other conductive media. Please try to keep it clean and dry.

DO NOT use Non-protected rechargeable batteries, or any other compromised state.

DO NOT take the battery out of the flashlight for charging.

Take good care of the battery. If the battery needs to be replaced, please keep the removed battery in a safe place. DO NOT mix it with the conductive media.

The product is left unused or carried and transported, please lock the battery to avoid accidentally activating the flashlight.

PERMANENT DAMAGE TO THE EYES

The max load of the Carabiner-Style Ring is 5kg, and please DO NOT use it for climbing.

PROXIMITY PROTECTION FUNCTION

When the front lens proximity sensor detects an object, it will automatically reduce the brightness. While in this state, the side switch can only turn the light off. The light will turn off directly if the blockage continues for more than 60 seconds.

ATTENTION

Please keep the surface of the lens clean. Scratches will affect the performance of the built-in sensor located in the black area, resulting in the failure of high and above modes, please take it into account.

Try to avoid to protect the lens from scratches. Scratches on the surface of the lens will reduce the luminous flux. In severe cases, it will affect the built-in sensor performance, resulting in the failure of high and above modes.

WARNING

DO NOT activate turbo mode repeatedly under high temperature. Present the flashlight body from overheating and hurting the user's hand.

The tail switch may not work immersed in sea water or other conductive media. Please try to keep it clean and dry.

DO NOT use Non-protected rechargeable batteries, or any other compromised state.

DO NOT take the battery out of the flashlight for charging.

Take good care of the battery. If the battery needs to be replaced, please keep the removed battery in a safe place. DO NOT mix it with the conductive media.

The product is left unused or carried and transported, please lock the battery to avoid accidentally activating the flashlight.

DANGER

DO NOT touch the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.

NOTICE

When the flashlight is turned off, moonlight, low medium, or high mode will be memorized and become the default mode when the light is turned on again. The light mode will only be memorized for 10 minutes. After that, the memorized mode will revert to the manual setting.

Please keep the mode only step down to high moonlight in 4 minutes in normal temperature.

DO NOT short-circuit the tail switch cap with the surrounding Low, Medium, and High mode. This may cause permanent damage to the tail switch, and may lead to a complete battery drain if it is in this state for too long.

The magnetic tail is easy to attract iron debris. Please keep the tail switch cap on the ring surrounding it.

The lanyard clip can only be installed in the rear clip slot as shown below.

EXCLUSION CLAUSE

Oolight is not liable for damages or injuries caused by the use of the flashlight. Please read the product instruction with the warnings in the manual, including but not limited to the recommended lock mode.

OPERATING INSTRUCTIONS

Press and hold the tail switch for momentary on. Press and hold the tail switch for 2 seconds to turn on the flashlight.

Press and hold the tail switch for 3 seconds to turn on the flashlight. Press and hold the tail switch for 4 seconds to turn on the flashlight.

Press and hold the tail switch for 5 seconds to turn on the flashlight. Press and hold the tail switch for 6 seconds to turn on the flashlight.

Press and hold the tail switch for 7 seconds to turn on the flashlight. Press and hold the tail switch for 8 seconds to turn on the flashlight.

Press and hold the tail switch for 9 seconds to turn on the flashlight. Press and hold the tail switch for 10 seconds to turn on the flashlight.

Press and hold the tail switch for 11 seconds to turn on the flashlight. Press and hold the tail switch for 12 seconds to turn on the flashlight.

Press and hold the tail switch for 13 seconds to turn on the flashlight. Press and hold the tail switch for 14 seconds to turn on the flashlight.

Press and hold the tail switch for 15 seconds to turn on the flashlight. Press and hold the tail switch for 16 seconds to turn on the flashlight.

Press and hold the tail switch for 17 seconds to turn on the flashlight. Press and hold the tail switch for 18 seconds to turn on the flashlight.

Press and hold the tail switch for 19 seconds to turn on the flashlight. Press and hold the tail switch for 20 seconds to turn on the flashlight.

Press and hold the tail switch for 21 seconds to turn on the flashlight. Press and hold the tail switch for 22 seconds to turn on the flashlight.

Press and hold the tail switch for 23 seconds to turn on the flashlight. Press and hold the tail switch for 24 seconds to turn on the flashlight.

Press and hold the tail switch for 25 seconds to turn on the flashlight. Press and hold the tail switch for 26 seconds to turn on the flashlight.

Press and hold the tail switch for 27 seconds to turn on the flashlight. Press and hold the tail switch for 28 seconds to turn on the flashlight.

Press and hold the tail switch for 29 seconds to turn on the flashlight. Press and hold the tail switch for 30 seconds to turn on the flashlight.

Press and hold the tail switch for 31 seconds to turn on the flashlight. Press and hold the tail switch for 32 seconds to turn on the flashlight.

Press and hold the tail switch for 33 seconds to turn on the flashlight. Press and hold the tail switch for 34 seconds to turn on the flashlight.

Press and hold the tail switch for 35 seconds to turn on the flashlight. Press and hold the tail switch for 36 seconds to turn on the flashlight.

Press and hold the tail switch for 37 seconds to turn on the flashlight. Press and hold the tail switch for 38 seconds to turn on the flashlight.

Press and hold the tail switch for 39 seconds to turn on the flashlight. Press and hold the tail switch for 40 seconds to turn on the flashlight.

Press and hold the tail switch for 41 seconds to turn on the flashlight. Press and hold the tail switch for 42 seconds to turn on the flashlight.

Press and hold the tail switch for 43 seconds to turn on the flashlight. Press and hold the tail switch for 44 seconds to turn on the flashlight.

CONTENTS

(EN) English 01

(CN) 简体中文 02

(FI) Finnish 03

(NO) Norwegian 04

(SV) Swedish 05

(NL) Nederlands 07

(PL) Polska 08

(DE) Deutsch 10

(HU) Magyarországi 12

(RU) Русский 13

(ES) Español 15

(RO) Romanian 16

(UA) Ukrainian 17

(JP) 日本語 20

(KR) 한국어 21

(TH) ไทย 23

(FR) Français 24

(BG) Български 25

(IT) Italia 27

(SK) Slovenskýajazyk 29

(NL) Nederlands 01

(PL) Polska 02

(DE) Deutsch 03

(HU) Magyarországi 04

(RU) Русский 05

(ES) Español 07

(RO) Romanian 08

(UA) Ukrainian 09

(JP) 日本語 11

(KR) 한국어 12

(EN) English

HOW TO OPERATE

MODE SWITCH

ON/OFF: Single click the side switch to turn the light ON/OFF. When the light is turned on again, it will return to the previously memorized mode.

CHARGE BRIGHTNESS LEVEL

Press and hold the side switch for 2 seconds to start changing from the present brightness level, automatically cycle through Low, Medium, and High mode.

MOONLIGHT MODE

Press and hold the side switch for 3 seconds to enter the moonlight mode. The light will be dimmed to a low level.

TURBO AND RETURN

Press and hold the side switch for 4 seconds to enter the turbo mode. Press and hold the side switch for 5 seconds to return to the previous mode.

LOCKOUT UNLOCK

Press and hold the side switch for 6 seconds to lock the flashlight. Press and hold the side switch for 7 seconds to unlock the flashlight.

TAIL SWITCH

Press and hold the tail switch for 8 seconds to turn on the flashlight. Press and hold the tail switch for 9 seconds to turn on the flashlight.

CONFIGURATION 1 (FACTORY DEFAULT SETTINGS)

Press and hold the tail switch for 10 seconds to enter the configuration menu. Press and hold the tail switch for 11 seconds to confirm the configuration.

CONFIGURATION 2

Press and hold the tail switch for 12 seconds to enter the configuration menu. Press and hold the tail switch for 13 seconds to confirm the configuration.

CONFIGURATION 3

Press and hold the tail switch for 14 seconds to enter the configuration menu. Press and hold the tail switch for 15 seconds to confirm the configuration.

CONFIGURATION 4

Press and hold the tail switch for 16 seconds to enter the configuration menu. Press and hold the tail switch for 17 seconds to confirm the configuration.

CONFIGURATION 5

Press and hold the tail switch for 18 seconds to enter the configuration menu. Press and hold the tail switch for 19 seconds to confirm the configuration.

CONFIGURATION 6

Press and hold the tail switch for 20 seconds to enter the configuration menu. Press and hold the tail switch for 21 seconds to confirm the configuration.

CONFIGURATION 7

Press and hold the tail switch for 22 seconds to enter the configuration menu. Press and hold the tail switch for 23 seconds to confirm the configuration.

CONFIGURATION 8

Press and hold the tail switch for 24 seconds to enter the configuration menu. Press and hold the tail switch for 25 seconds to confirm the configuration.

Press and hold the tail switch for 26 seconds to enter the configuration menu. Press and hold the tail switch for 27 seconds to confirm the configuration.

(CN) 简体中文

HOW TO OPERATE

MODE SWITCH

ON/OFF: Single click the side switch to turn the light ON/OFF. When the light is turned on again, it will return to the previously memorized mode.

CHARGE BRIGHTNESS LEVEL

Press and hold the side switch for 2 seconds to start changing from the present brightness level, automatically cycle through Low, Medium, and High mode.

MOONLIGHT MODE

Press and hold the side switch for 3 seconds to enter the moonlight mode. The light will be dimmed to a low level.

TURBO AND RETURN

Press and hold the side switch for 4 seconds to enter the turbo mode. Press and hold the side switch for 5 seconds to return to the previous mode.

LOCKOUT UNLOCK

Press and hold the side switch for 6 seconds to lock the flashlight. Press and hold the side switch for 7 seconds to unlock the flashlight.

TAIL SWITCH

Press and hold the tail switch for 8 seconds to turn on the flashlight. Press and hold the tail switch for 9 seconds to turn on the flashlight.

CONFIGURATION 1 (FACTORY DEFAULT SETTINGS)

Press and hold the tail switch for 10 seconds to enter the configuration menu. Press and hold the tail switch for 11 seconds to confirm the configuration.

CONFIGURATION 2

Press and hold the tail switch for 12 seconds to enter the configuration menu. Press and hold the tail switch for 13 seconds to confirm the configuration.

CONFIGURATION 3

Press and hold the tail switch for 14 seconds to enter the configuration menu. Press and hold the tail switch for 15 seconds to confirm the configuration.

CONFIGURATION 4

Press and hold the tail switch for 16 seconds to enter the configuration menu. Press and hold the tail switch for 17 seconds to confirm the configuration.

CONFIGURATION 5

Press and hold the tail switch for 18 seconds to enter the configuration menu. Press and hold the tail switch for 19 seconds to confirm the configuration.

CONFIGURATION 6

Press and hold the tail switch for 20 seconds to enter the configuration menu. Press and hold the tail switch for 21 seconds to confirm the configuration.

CONFIGURATION 7

Press and hold the tail switch for 22 seconds to enter the configuration menu. Press and hold the tail switch for 23 seconds to confirm the configuration.

CONFIGURATION 8

Press and hold the tail switch for 24 seconds to enter the configuration menu. Press and hold the tail switch for 25 seconds to confirm the configuration.

Press and hold the tail switch for 26 seconds to enter the configuration menu. Press and hold the tail switch for 27 seconds to confirm the configuration.

(ES) Español

HOW TO OPERATE

MODE SWITCH

ON/OFF: Single click the side switch to turn the light ON/OFF. When the light is turned on again, it will return to the previously memorized mode.