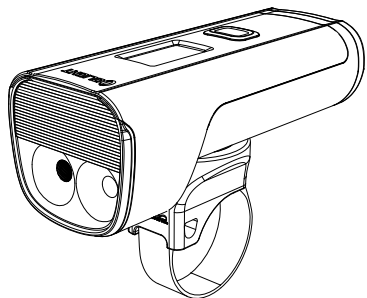


OLIGHT**MAGICSHINE**

USER MANUAL

**ALLTY 2000**
BICYCLE LIGHT

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX




ALLTY 2000

Handlebar mount

3mm Hex

Aero bar compatible strap

Micro USB Cable

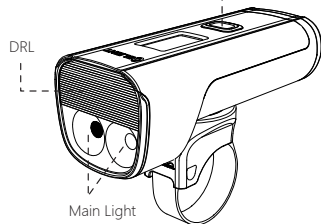Power button
Long press to turn on/off

DRL

Main Light

SPECIFICATIONS

LUMENS/RUN TIME

MODE	BRIGHTNESS	10%	25%	50%	100%
	LUMENS	/	/	/	55
	h:min	/	/	/	14:30
	LUMENS	100	250	500	1000
	h:min	10:00	05:30	03:30	02:00
	LUMENS	100	250	500	1000
	h:min	10:00	05:30	03:30	02:00
	LUMENS	200	500	1000	2000
	h:min	08:30	03:30	02:00	01:00
	LUMENS	200	500	1000	1800
	h:min	10:50	05:30	03:30	01:50



165m

7000cd


1m

IPX5


(L)3.90 x (W)1.65 x (H)1.54in
(L)99 x (W)42 x (H)39mm6.47oz
183g

Note: The maximum output brightness will decrease as the battery voltage decreases.


HOW TO INSTALL

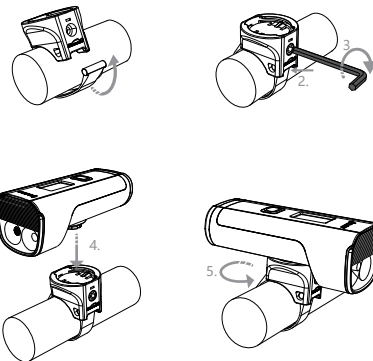

HOW TO RECHARGE

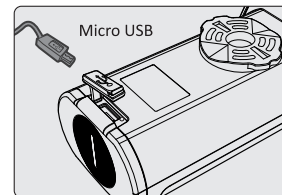Charging75%
50%
25%
1%**Fully charged****Standard charging time**
Approx.5hrs (5V 2A)

OLED SCREEN

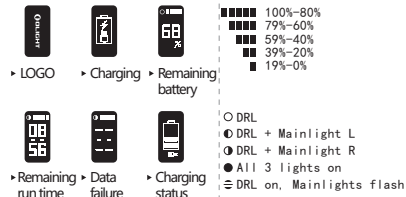


- LOGO
- Charging
- Remaining battery


- Remaining run time
- Data failure
- Charging status

- 100%~80%
- 79%~60%
- 59%~40%
- 39%~20%
- 19%~0%

- DRL
- DRL + Mainlight L
- DRL + Mainlight R
- All 3 lights on
- ≡ DRL on, Mainlights flash

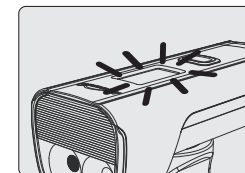

HOW TO EXCHANGE BATTERY MODULE

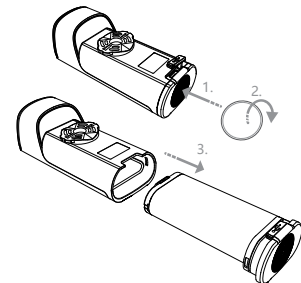



WARNING

- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the light head when the bicycle light is on, or place the bicycle light head on the ground. The radiation energy of the bicycle light may cause damage to the bicycle light itself, or even result in burning to flammable objects.

WARNING

- Keep out of reach of children.
- The light contains a lithium-ion battery. Certain restrictions may apply to this product when traveling, especially when traveling by air. Always check with your carrier for specific restrictions prior to traveling with this product.

NOTICE

Store the light at room temperature in a dry place. Avoid moisture, or extreme hot or cold.

Store the light in the charged condition. Avoid "deep discharge." Battery life will decrease if the light is stored in a fully discharged condition.

Over time, the run time of the battery will diminish. Expect about 500 full charges, depending on care. After a full life, the battery will continue to charge but with a lower run time.

When the run time is unsatisfactory, please recycle. Do not open the case of the light or incinerate.

CONTENTS

(EN) English	01
(CHS) 简体中文	01
(NED) Nederland	01
(DE) Deutsch	01
(JP) 日本語	01
(FR) Français	02
(IT) Italia	02

(EN) English

HOW TO OPERATE

Long press to turn on/off the light, click to change the brightness level and flash modes, and double click to switch modes. Mode memory function will save the last selected mode and brightness.

(CHS) 简体中文

如何操作

长按开机 / 关机, 单击切换不同亮度或闪烁方式, 双击切换不同模式。再次开机进入上次关机时的模式及亮度。

(NED) Nederland

HOE TE BEDIENEN

Druk lang om het licht aan/uit te zetten, klik om het helderheidsniveau en de flits modi te veranderen en dubbelklik om tussen de modi te schakelen. De modus geheugenfunctie zal de laatste geselecteerde modus en helderheid opslaan.

(DE) Deutsch

BEDIENUNG

Gedrückt halten, um das Licht ein-/auszuschalten. Kurz Anklicken zum Umschalten der Helligkeitsstufe und Blitzmodi und Doppelklicken zum Umschalten der Modi. Die Modus-Speicherfunktion wird den zuletzt ausgewählten Modus und die Helligkeitsstufe speichern.

(JP) 日本語

使用方法

ON/OFFランプを長く押して、クリックして輝度のレベルとフラッシュモデルを変更し、ダブルクリックしてSWITHモデルに切り替えます。モデルメモリ機能が最後のモデルと輝度の記録を残ります。

(FR) Français

COMMENT L'UTILISER

Appuyez longuement pour allumer/éteindre la lumière, cliquez pour changer le niveau de luminosité et les modes de flash, et double-cliquez pour basculer d'un mode à l'autre. La fonction de mémoire de mode enregistre le dernier mode et la dernière luminosité sélectionnés.

(IT) Italia

FUNZIONAMENTO

Premere a lungo per accendere / spegnere la luce, cliccare per modificare il livello di luminosità e le modalità flash e fare doppio clic per cambiare modalità. La funzione di memorizzazione della modalità salverà l'ultima modalità e luminosità selezionate.

WARRANTY

Within 30 days of purchase: Return to the original seller for repair or replacement.

Within 2 years of purchase: Return to Olight for repair or replacement. This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Olight itself.

USA Customer Support

cs@olightstore.com

Global Customer Support

customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.



Dongguan Olight E-Commerce Technology Co., Ltd

4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China



THANK YOU!