

USER MANUAL

Warrior Mini 3
Cracked Brass (LIMITED EDITION)
A Powerful Compact Rechargeable Dual-Switch EDC Flashlight

IN THE BOX

Warrior Mini 3
L-Shape Stand
MCC

| | | |
|----------------|---|----------------------------|
| 14,400cd | 240m | 1.5m |
| IPXB | 177g/6.24oz (Including Battery) | Working temperature 0-40°C |
| (L)111*(D)23mm | Rechargeable Li-ion Battery (L)4.37*(D)0.91in | 12.6Wh (3500mAh 3.6V) |

* Above data are tested per ANSINEMA FL-1-2008 standard in Olight's labs for reference.

Table 2: MCC

| | |
|----------------------|---------------------|
| Cable length | 0.5m |
| Input | USB type A DC 5V 2A |
| Output | CC&CV 4.2V 2.0A |
| Time to fully charge | About 3.5 hours |

Table 1: Specification

COOL WHITE CCT: 5700-6700K CRI:70

| | | | |
|-----------|---------|---------|-------|
| TURBO | 1,200lm | 220m | 30min |
| HIGH | 500lm | 215m | 30min |
| MEDIUM | 133lm | 18m | |
| LOW | 12lm | 165h | |
| MOONLIGHT | 0.1lm | 100days | |

Figure 1

Remove the insulating film

Figure 2

Red: Charging
Green: Charging Completed

Figure 3

Press

OFF → ON

Figure 4

Press and hold

>1 sec → >2 sec

Figure 5

Press and hold

1 to 2 sec

Figure 6

Double press

Low → High → Medium → Turbo

Figure 7

Triple press

Low → High → Medium → Turbo

Figure 8

Press and hold

Low → High → Medium → Turbo

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

CONTENTS

| | |
|----------------------|----|
| (EN) English | 01 |
| (CN) 简体中文 | 02 |
| (FI) Finnish | 03 |
| (NO) Norwegian | 04 |
| (SV) Swedish | 05 |
| (NL) Nederlands | 06 |
| (PL) Polska | 07 |
| (DE) Deutsch | 08 |
| (HU) Magyarország | 09 |
| (RU) Русский | 10 |
| (ES) Español | 11 |
| (RO) Românesc | 12 |
| (JP) 日本語 | 13 |
| (KR) 한국어 | 15 |
| (TH) ไทย | 16 |
| (FR) Français | 18 |
| (SK) Slovenský jazyk | 19 |
| (PT) Português | 20 |

Table 3

Multi-language dictionary

| EN | Moonlight | Low | Medium | High | Turbo | Strobe | Press | Double press | Triple press | Tap | Tap and hold | Press and hold | Configuration change | Configuration 1 (Factory mode) | Configuration 2 (Strobe mode) |
|----|------------------------|-----------------------|------------------------|-----------------------|----------------|-------------------|------------|-----------------------|-----------------------|--------------------|---------------------------------|--------------------------------|-------------------------------|--------------------------------------|---------------------------------------|
| FI | 月夜光 | 低档 | 中档 | 高档 | 极亮档 | 爆闪 | 单击 | 双击 | 三击 | 轻按 | 轻按保持 | 长按 | 配置切换 | 配置 1 (出厂模式) | 配置 2 (爆闪模式) |
| NO | Moonlight-modus | Lav-modus | Medium-modus | Hoig-modus | Turbo-modus | Blink-modus | Trykk | Trykk to ganger | Trykk tre ganger | Trykke på | Trykk og hold | Hold inne | Endring av konfigurasjon | Konfigurasjon 1 (fabrikkmått) | Konfigurasjon 2 (Strobe-modus) |
| SV | Moonlight-läge | Låg-läge | Medanläge | Hög-läge | Turbo-läge | Blixt-läge | Tryck | Dubbeltryck | Trippel tryck | Trycka på | Tryck och håll | Tryck och håll | Ändra konfiguration | Konfiguratio 1 (fabrikinställning) | Konfiguratio 2 (Strobe-läge) |
| NL | Maanlicht-modus | Lage Modus | Gemiddeld de Modus | Hoie Modus | Turbo Modus | Stroboscoop | Druk | Dubbel drukken | Driemaal drukken | Tik | Tik en houd vast | Houd ingedrukt | Configure wijziging | Configuratie 1 (fabrieksinstelling) | Configuratie 2 (Strobe-modus) |
| PL | Tryb światła księżycy | Tryb niski | Tryb średni | Tryb wysoki | Tryb turbo | Strobe | Naciśnij | Naciśnij dwa razy | Naciśnij trzy razy | Dotknij | Dotknij i przytrzymaj | Dotknij i przytrzymaj | Zmiana konfiguracji | Konfiguracja 1 (fabryczna) | Konfiguracja 2 (tryb Strobe) |
| DE | Moonlight-Modus | Niedriger Modus | Mittlerer Modus | Hoher Modus | Turbo-Modus | Strobe | Drücken | Naciśnij dwukrotnie | Dreifach drücken | Halb drücken | Halb gedrückt halten | Gedrückt halten | Änderung der Konfiguration | Konfiguration 1 (Werkstatt) | Konfiguration 2 (Strobe-Modus) |
| HU | Holdfény mód | Alacsony mód | Közepes mód | Magas mód | Turbo mód | Stroboszkóp | Megnyomás | Dupla megnyomás | Tripla megnyomás | Érintés | Érintés és tartás | Nyomva tartás | Konfiguráció váltás | Konfiguráció 1 (gyári mód) | Konfiguráció 2 (Strobe mód) |
| RU | Режим лунного света | Минимальный режим | Средний режим | Максимальный режим | Турбо режим | Резкий стробоскоп | Нажмите | Двойное нажатие | Тройное нажатие | Нажмите | Нажмите и удерживайте | Нажмите и удерживайте | Изменение конфигурации | Конфигурация 1 (заводская) | Конфигурация 2 (режим стробоскопа) |
| ES | Modo de luz de luna | Modo de potencia baja | Modo de potencia media | Modo de potencia alta | Modo turbo | Estroboscópico | Presione | Presione dos veces | Presione tres veces | Pulse | Pulse y mantenga | Mantenga presionado | Cambios de configuración | Configuración 1 (modo Fábrica) | Configuración 2 (modo Estroboscópico) |
| RO | Mod de veghe | Mod mic | Mod mediu | Mod mare | Mod turbo | Stroboscop | Apăsare | Apăsare dublă | Apăsare triplă | Atingeți | Atingeți și țineți apăsat | Apăsare și țineți apăsat | Modificarea configurației | Configurația 1 (modul fabricii) | Configurația 2 (modul Estroboscopic) |
| UA | Режим місячного світла | Режим Low | Режим Medium | Режим High | Турбо-режим | Різкий стробоскоп | Прес | Подвійне натискання | Трипліе натискання | Натисніть | Натисніть і утримуйте | Натисніть і утримуйте | Зміна конфігурації | Конфігурація 1 (заводський режим) | Конфігурація 2 (режим стробоскопа) |
| JP | ムーンライトモード | ローモード | メディウムモード | ハイモード | ターボモード | ストロボモード | プレス | ダブルプレス | トリプルプレス | 押す | 押したまま | 押したまま | 設定変更 | 設定1 (出荷時の設定) | 設定2 (ストロボモード) |
| KR | 문어빛 모드 | 로우 모드 | 미디엄 모드 | 하이 모드 | 티보 모드 | 스트로브 모드 | 누르기 | 두번 누르기 | 세번 누르기 | 촉하기 | 촉한 채로 유지하기 | 촉한 채로 유지하기 | 사용 환경 변경 | 설정 1 (출고 시 설정) | 설정 2 (스트로브 모드) |
| TH | โหมดไฟจันทร์ | โหมดไฟต่ำ | โหมดไฟกลาง | โหมดไฟสูง | โหมดไฟสุด | โหมดไฟแฟลช | แตะ | แตะสองครั้ง | แตะสามครั้ง | แตะ | แตะและกด | กด | การเปลี่ยนแปลงการตั้งค่า | การตั้งค่าโรงงาน 1 (โหมดไฟจันทร์) | การตั้งค่าโรงงาน 2 (โหมดไฟแฟลช) |
| FR | Mode Luciole | Mode Faible | Mode Moyen | Mode Haut | Mode Turbo | Stroboscope | Appuyer | Double pression | Triple pression | Appuyer légèrement | Appuyer légèrement et maintenir | Appuyer fortement et maintenir | Changement de configuration | Configuration 1 (Usine) | Configuration 2 (Stroboscope) |
| IT | Modalità chiaro | Modalità bassa | Modalità media | Modalità alta | Modalità Turbo | Strobo | Premere | Premere due volte | Premere tre volte | Premi | Premi e tieni premuto | Premere e tenere premuto | Modifica della configurazione | Configurazione 1 (modalità fabbrica) | Configurazione 2 (modalità Strobo) |
| SK | mesačný svät | slabý režim | stredný režim | vysoký režim | turbo režim | stroboskop | Stlačenie | Dvojité stlačenie | Trojité stlačenie | Klepnite | Klepnite a podržte | Klepnite a podržte | Zmena konfigurácie | Konfigurácia 1 (závodný režim) | Konfigurácia 2 (stroboskopický režim) |
| PT | Modo Luar | Modo baixo | Modo Médio | Modo alto | Modo turbo | Strobo | Pressionar | Pressionar duas vezes | Pressionar três vezes | Tocar | Tocar e manter | Manter pressionado | Alteração de configuração | Configuração 1 (modo de Fábrica) | Configuração 2 (modo Estroboscópico) |

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-1

Green: >60%
Orange: 10-60%
Red: 5-10%
Blink Red: <5%

Figure 16-1

* Block the light output before or within 0.5 seconds after the flashlight is activated in High/Turbo mode.

Double press

High/Turbo → Medium

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

Figure 15-2

OFF: >5%
Blink Red: <5%

Figure 16-2

* Block the light output 0.5 seconds or more after the flashlight is activated in High/Turbo mode.

High/Turbo → High/Turbo

Figure 17

Double press the side switch within 5 seconds after the downshift caused by obstruction.

Double press

Medium → High/Turbo

Figure 18

L-stand application

WARRANTY

Within 30 days of purchase: Contact the original seller for repair or replacement.
Within 5 years of purchase: Contact Olight for repair or replacement.
Battery warranty: Olight offers a one-year warranty for all rechargeable batteries.
MCC magnetic USB charging cable: One year.
For any of the fragile or low-value fittings not covered above, like lanyard and clip, you can contact the post-sale within 30 days of the purchase, if it has any quality drawback or damage under normal use condition. If such drawback or damage occurs after 30 days of the purchase or under abnormal use condition, we will only offer conditional quality assurance as appropriate.

USA Customer Support: cs@olightstore.com
Global Customer Support: contact@olightworld.com
Visit www.olightworld.com to see our complete product line of portable illumination tools.

OOLIGHT

Dongguan Olight E-Commerce Technology Co., Ltd.
4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changgu Industrial Zone, Dongguan City, Guangdong, China.
Made in China

RoHS
CAN ICES-005 (B) / NMB-005 (B)
3.4000.0660 A. 07. 27. 2023