



## USER MANUAL

### S1R BATON NOT Turbo

S/N G08220001 - G08228500

#### INSIDE THE BOX

S1R Baton, 1 x RCR123A Lithium battery (installed inside the flashlight), USB charging cable, Lanyard, Container, User manual.

#### SPECIFICATIONS


Material: 6061-T6 aluminum alloy structure, Type III hard anodizing, stainless steel pocket clip.

145 m	MAX 900 lumens	5250 cd	IPX8
1.5 m	Cree XM-L2	1x RCR123A	
10 Hz	(L)66x (D)21 mm	54 g including battery	

MODE 1	MODE 2	MODE 3	MODE 4	MODE 5
900~300 LUMENS	300 LUMENS	60 LUMENS	12 LUMENS	0.5 LUMENS
0.5+55 MINS	60 MINS	4.5 HRS	33 HRS	15 DAYS

#### BATTERY INSTALLATION

Ensure the battery is inserted with the negative (-) end pointing to the head of the flashlight (LED side). The flashlight will not operate with incorrectly inserted battery.

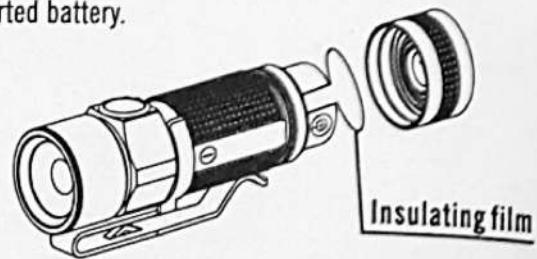

Insulating film

Before first use, unscrew the tailcap and take off the insulating film.

#### AVAILABLE BATTERIES

- 1 x RCR123A Lithium BATTERY

www.DrMemory.com/Olight

( EN ) English

#### BATTERY INSTALLATION

Before your first use, unscrew the tailcap and remove the insulating film inside the battery compartment before screwing the tailcap back on tightly. If the battery needs to be changed, make sure that the negative polarity side is inserted facing the direction of the flashlight head (the side of the LED).

#### CHARGING

Charge the flashlight before your first use. Connect one end of the portable charging cable with an external USB power source and attach the other end to the tailcap. The charging indicator light glows red while the flashlight is being charged. The charging indicator will glow green when the flashlight is fully charged or on standby. A USB power source is not included in the package. You can charge the product through USB ports on the computer, USB mobile phone chargers, or portable power banks.

#### HOW TO OPERATE

**ON/OFF:** Single click the side switch to turn the light on/off. When the light is turned on, it will return to the previous brightness level selected before the light was turned off. When the flashlight is switched off, the current mode will be memorized. Modes that can be memorized are: Moonlight, low, medium, high and turbo (High and turbo mode are memorized for only 10 minutes. After that, the memorized mode will revert to the medium setting).

**CHANGE BRIGHTNESS LEVEL:** When the flashlight is on, press and hold the side switch to automatically cycle through the low, medium, high, and turbo modes. The mode is selected when the side switch has been released.

**MOONLIGHT MODE:** When the flashlight is off, press and hold the side switch for over one second to access the moonlight mode. If the memorized mode is moonlight, simple click the switch to access it.

**DIRECT ACCESS TO TURBO MODE:** When the flashlight is off, quickly double press the side switch to activate the turbo mode; when the flashlight is on, quickly double press and then hold the side switch to activate the turbo mode.

**STROBE:** Quickly triple click the side switch to enter the strobe mode. To quit this mode, single click or press and hold the side switch.

**LOCKOUT/UNLOCK:** When the flashlight is off, press and hold the side switch (for about 2 seconds) to access the button lockout mode (the flashlight will enter the moonlight mode first and will then switch off to signal the lockout mode). Under the lockout mode, press and hold the switch for less than one second without releasing it. The red indicator below the switch

will be on for a short time to signal that the light is still in a lockout mode. To unlock it, keep holding switch for over one second until the moonlight mode is on again.

**TIMER:** The S1R Baton has a long (9 minutes) and short (3 minutes) timer when the light needs to be automatically turned off. When the flashlight is on, double click the side switch under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The flashlight will automatically turn off when the timer is up. After the timer is set, double click the side switch to shift the timer settings. When the timer is up and the user is about to enter the timer again, the light will return to the last timer setting.

( CHS ) 简体中文

#### 电池安装

手电首次使用前, 请旋开尾盖并取出内部的绝缘片, 然后旋紧尾盖。如需更换电池, 请注意电池负极朝向手电头部 (LED所在的一端)。

#### 充电

使用之前, 先对产品充电。将便携充电线的一端连接到外部USB电源 (USB电源不包含在本产品中, 用户可使用电脑USB端口或手机、数码产品USB充电器或移动电源), 将另一端吸附在手电尾盖上, 指示灯红色表示充电进行中, 绿色表示充满或充电器待机。

#### 如何使用手电

**开/关机:** 单按按键开关机。开机时, 手电点亮在记忆存储的亮度。记忆体保存的模式为其中之一: 月光、低亮、中亮、高亮、Turbo (高亮与Turbo关档记忆10分钟, 之后转为中亮), 在关机时, 当前模式存入记忆体。

**改变亮度:** 长按按键, 输出从当前亮度开始, 按月光->低->中->高->Turbo->低顺序改变, 释放按键时选定亮度。

**开启月光:** 关机状态下按住按键1秒以上, 月光开启, 如前次关机为月光, 单按按键即可。

**快捷进入Turbo模式:** 在关机状态下, 快速双按按键, 输出最高亮度; 或者在开机状态下, 快速双按按键并短暂保持 (第二次按下后短暂停留, 解后释放按键)。

**爆闪:** 快速连按三次 (或以上) 进入爆闪, 单按或长按按键退出。

**锁键与解锁:** 关机状态下, 按住按键 (约2秒) 直至见到月光熄灭, 手电进入锁键状态。对于非解锁操作, 按键底部的红色指示灯短时间亮起提示。按住按键 (约1秒) 直至手电亮起月光, 手电自动解锁。

**定时关机:** 手电可设置两种定时时长: 长定时 (9分钟) 与短定时 (3分钟)。开机后, 在当前亮度下, 双按按键, 输出闪一次为短定时, 闪两次为长定时, 计时结束自动关机。在计时过程快速双按按键转换定时设置。第一次定时结束后, 再次进入定时设置, 使用前次定时时长。

( FI ) Finnishh

#### AKUN ASENTAMINEN

Ennen ensimmäistä käyttökertaa, kierrä korkki auki ja irroita eristemuovi akun päästä. Kierrä korkki tiukasti kiinni. Jos akku täytyy vaihtaa, varmista että miinus (-) -napa osoittaa valaisimen etuosaa kohden.

#### LATAAMINEN

Lataa valaisin ennen ensimmäistä käyttöä. Yhdistä latausjohto USB-kaapelilla USB-porttiin. Liitä valaisin latausjohtoon, latausjohto tarttuu valaisimeen magneetilla. Indikaattori valo ilmaisee latauksen vaiheen. Mikäli valo palaa punaisena, lataus on käynnissä. Vihreän valon sytyessä valaisin on ladattu täyteen ja aika laturi on valmiustilassa.

#### KÄYTTÖOHJEET

**PÄÄLLE/POIS:** Yksi painallus kytkimestä sytyttää tai sammuttaa valaisimen. Valaisin muistaa sytyessään edellisen valotehon. Valaisin muistaa jokaisen tehotilan. (High ja Turbo toimintatilat pysyvät muistissa 10 minuttin ajan, jonka jälkeen valaisin pudottaa muistettavan valotehon medium tilaan.)

**TEHOTILAN VAIHTAMINEN:** Kun valaisin on päällä, pidä kytkintä painettuna pitkään. Valaisin alkaa vaihtamaan toimintatilaan low-medium-high-turbo-low järjestyksessä. Valitaksesi toimintatilan vapauta kytkin, jolloin valittu tehotila jää voimaan.

**MOONLIGHT TILA:** Valaisimen ollessa sammuksissa paina kytkintä pitkään pohjassa. Valaisin sytty moonlight tilaan, eli alhaisimpaan tehotilaan. Tehotila pysyy muistissa.

**SUORA PÄÄSY TURBO TILAAN:** Kun valaisin on sammuksissa tuplaklikkaa kytkintä nopeasti. Valaisin sytty suoraan turbo-tehotilaan. Normaali käytössä valaisimen ollessa päällä turbo-tila aktivoituu tuplaklikkaamalla nopeasti kytkintä. Poistu turbo-tehotilasta painamalla kytkintä pitkään pohjassa.